

Since 1983


CHAD-O-CHEF
Lifestyle products



STANDARD ROTISSERIE DOME INSTALLATION & GENERAL INSTRUCTIONS

Refer to the relevant Installation & Operating Instruction Manual for your Chad-O-Chef gas insert.

Please read these instructions carefully before installation.
Use and retain them for future reference.

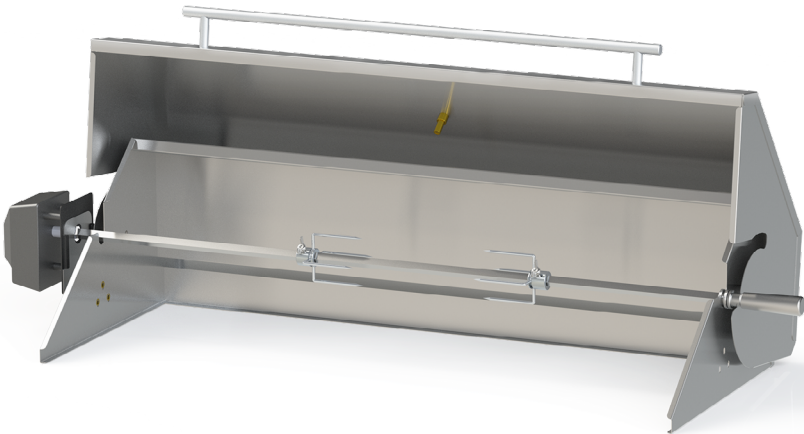


SRD320 / SRD420 / SRD520 / SRD620

Thank you for purchasing your new CHAD-O-CHEF product, manufactured to the highest standards. This accessory is designed to be used with Chad-O-Chef gas grill appliances, to give users years of trouble free and efficient service. This accessory is designed for domestic use only. Please read the following instructions carefully.

The manufacturer / its agents and distributors will not be held responsible for injuries or damages resulting from unauthorized, faulty, incorrect installation, or incorrect / misuse of the accessory.

INSTALLATION INSTRUCTIONS

- Step 1:** Remove the top grids from your Chad-O-Chef gas grill appliance.
- Step 2:** Place the dome into the inner cavity of the grill, resting on the same channels that support the top grids.
- Step 3:** Replace the top grids.
- Step 4:** Place the motor onto the bracket provided on the side of the dome.
- Step 5:** Place the assembled rotisserie rod (bushes, skewers, handle) into the dome as per the drawing below.
- Step 6:** Connect the Motor plug to an electrical source.

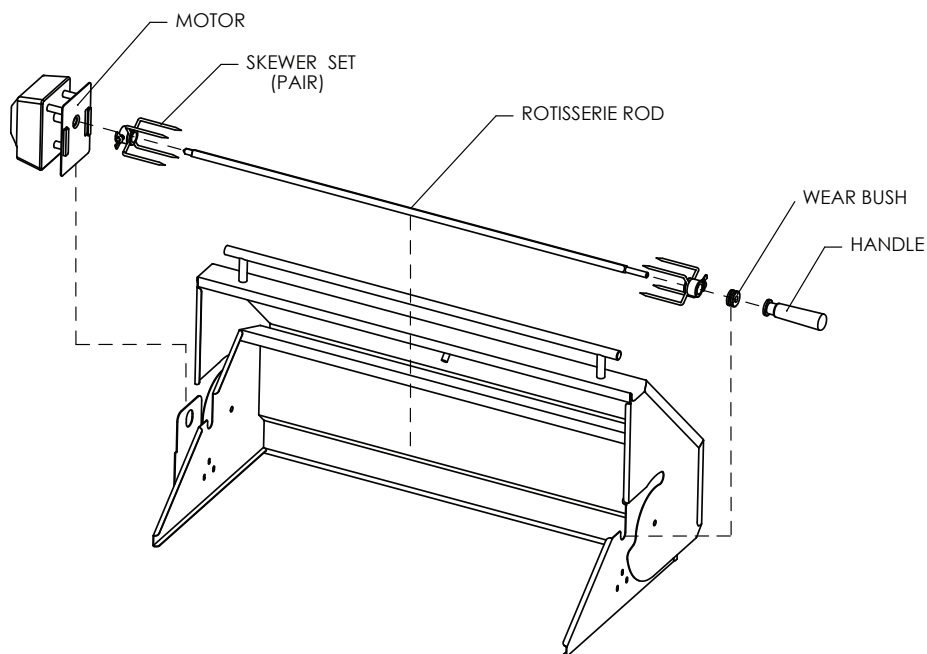

USAGE INSTRUCTIONS

Note: The motor has a maximum turning load capacity of 7.5 kg. Overloading the motor will cause it to malfunction and fail. Overloading the motor can be seen by the motor changing rotational direction before it completes a full rotation.

- Make sure to read the operating instructions for the COC gas grill that the accessory will be used on.
- Centre the item to be cooked on the rotisserie rod length. Ensure the item mass is evenly distributed around the rotisserie rod.
- Ensure that the wingnuts on the skewers are tightened.
- Preheat the cooking area with all burners on the high setting for 5 min, or until the temperature reaches 150°C.
- Turn the middle burner/s control knobs to the off or low position on the gas grill, leaving the outer burners on the medium or high setting. Close the dome and check on the items being grilled regularly.

Warning: Do not have all the grill burners on high with the dome closed.

CARE & MAINTENANCE

- Your accessory is manufactured predominantly from stainless steel. As an aesthetically pleasing and very durable material, it is widely used, including for accessory manufacture.
- Appropriate, correct, gentle & routine cleaning of stainless steel is necessary to prolong its inherent corrosion-resistant nature. For a guide on how to do this effectively, visit our website:
<https://chad-o-chef.co.za/chad-o-chefs-care-maintenance-guide-for-stainless-steel/>
- Before undertaking any cleaning or maintenance work on this accessory, make sure that it is not hot.
- When not in use, the rotisserie dome will need to be covered or stored in a dry sheltered area to prevent moisture buildup behind the glass of the thermometer, and to protect the rotisserie motor from water damage.

GUARANTEE

Chad-O-Engineering (Pty) Ltd (COC) guarantees products manufactured by Chad-O-Chef.

Refer to our website for more details on what is included in your guarantee.

<https://chad-o-chef.co.za/guarantees/>



WARNING:

This unit gets very hot.

Keep young children away from the appliance when in use.

Last Update: 2026/05/12

Manufactured By:

Chad-o Engineering (Pty) Ltd
PO Box 986 Honeydew 2040
South Africa

Tel: (+27)11 668 1910

Email: sales@chad-o-chef.co.za
www.chad-o-chef.co.za